

NO FRUIT - E27 RGB DMX - 12x 1W luxeon.



DIPSWITCH					No.	DMX channels		
Off = UP		On = DOWN						
Switch	1 =	120	Ohm					
2	3	4	5	6				
0	0	0	0	0				
1	0	0	0	0	1	1	2	3
0	1	0	0	0	2	4	5	6
1	1	0	0	0	3	7	8	9
0	0	1	0	0	4	10	11	12
1	0	1	0	0	5	13	14	15
0	1	1	0	0	6	16	17	18
1	1	1	0	0	7	19	20	21
0	0	0	1	0	8	22	23	24
1	0	0	1	0	9	25	26	27
0	1	0	1	0	10	28	29	30
1	1	0	1	0	11	31	32	33
0	0	1	1	0	12	34	35	36
1	0	1	1	0	13	37	38	39
0	1	1	1	0	14	40	41	42
1	1	1	1	0	15	43	44	45
0	0	0	0	1	BLACKOUT			
1	0	0	0	1	RED			
0	1	0	0	1	GREEN			
1	1	0	0	1	YELLOW			
0	0	1	0	1	BLUE			
1	0	1	0	1	MAGENTA			
0	1	1	0	1	CYAAN			
1	1	1	0	1	DO NOT USE THIS SETUP!			